

Extended Magwell (PN 04.101) for

- o **AR-15 9x19 Conversions with .223 Rem Lower and Colt magazines**

Thank you for choosing a high-quality **TECTAL** product!

The *extended magwell* has been 100% engineered and “Made in Austria”. It offers the following benefits:


- ✓ Faster Reloads
- ✓ Modular adjustability to suit a wide range of AR-15 .223 Rem lower receivers (= lower)*
- ✓ High quality materials used throughout the construction (high strength Aluminium, stainless hardware, etc.)



Supplied Parts:

- 1 pc. each *TECTAL Extended Magwell and Retaining Collar*
- 1 pc. each *Spacer 1mm, 2mm*
- 4 pcs. each *Bolts short, medium, long*
- 4 pcs. each *O-rings slim, medium, thick*



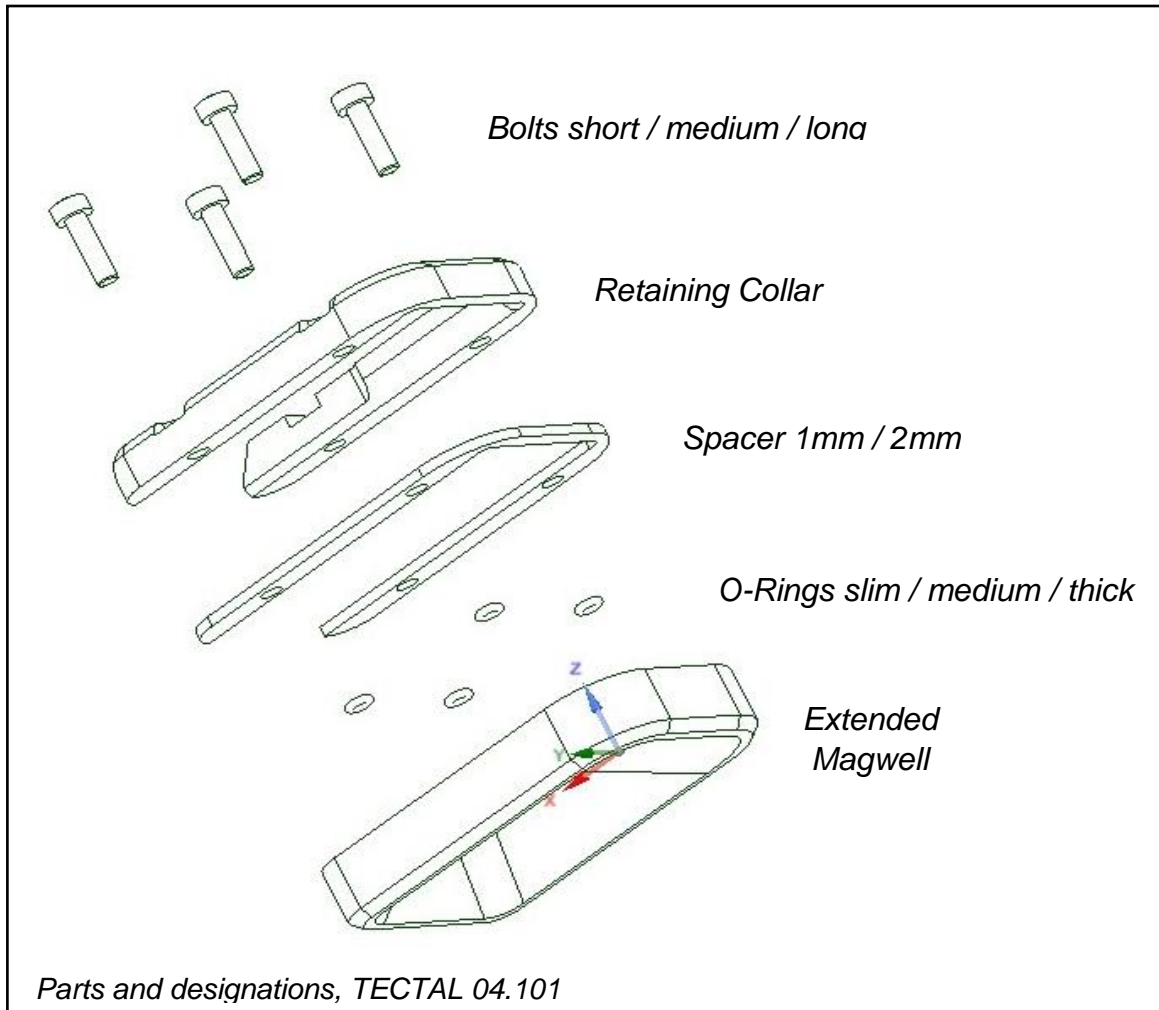

INSTALLATION - PREPARATION

1. **Before maintaining or working on any firearm always ensure that it is unloaded and safe!**

While pointing the firearm in a safe direction remove any magazine from the firearm and ascertain it is unloaded by locking the slide to the rear and visually inspecting the chamber before working on or cleaning it! If loaded follow the proper procedures to unload the firearm safely!



Firearms Safety is your responsibility!

2. It is recommended to separate the lower and upper receiver for the installation process. The installation is on the lower only.
3. The 9mm magazine adapter must be inserted **before** the installation of the *extended magwell*!

INSTALLATION

Required tools:

- 2,5mm Allen key - preferably torque wrench with 2,5mm bit
1. Fit the *extended magwell* to the original magwell (→ loose fit; retention by *retaining collar*).
 2. Fit the *retaining collar* by sliding it on from the front and lowering it towards the *extended magwell*.
 3. Check if / how the *retaining collar* contacts the *extended magwell*:
 - a. **No gap between *extended magwell* and *retaining collar*** – no *spacer* is required. The *retaining collar* can be bolted to the *extended magwell* using the *short bolts* (M4x12)

Maximum recommended tightening torque is 2,6Nm.

If the completed *extended magwell* shows play on the lower 4 pcs. of the best sized *o-rings* shall be added to eliminate resp. minimize any play:

- Undo the bolts connecting the *retaining collar* to the *extended magwell*
- Position 4 equally sized *o-rings* in the 4 indentations on the top side of the *extended magwell* (see pic. below)
- Bolt the *retaining collar* to the *extended magwell* with the *o-rings* in place



Positioning of o-rings

b. Gap between *extended magwell* and *retaining collar* – the use of the provided *spacers* is required!

- I. Depending on the gap the 1mm, the 2mm *spacer* or both combined (= 3mm) may be used. The *slimmest spacer* which completely eliminates the gap is retained for further installation!



- II. The *retaining collar* can be bolted to the *extended magwell* using the preselected *spacer(s)*.
- 1mm or 2mm *spacer* → *medium bolts* (M4x14)
 - 3mm combined *spacers* → *long bolts* (M4x16)

Maximum recommended tightening torque is 2,6Nm in any case.

- III. If the completed *extended magwell* shows play on the lower 4 pcs. of the best sized *o-rings* shall be added to eliminate resp. minimize any play:
- Undo the bolts connecting the *retaining collar* to the *extended magwell*
 - Position 4 equally sized *o-rings* in the 4 indentations on the top side of the *extended magwell* (see pic. p.3)
 - Bolt the *retaining collar* to the *extended magwell* with the *o-rings* and the pre-selected *spacer(s)* in place

- c. Once the installation is complete the *bolts* may be secured with Loctite 243 (blue) or a comparable, non-permanent, medium thread locker to ensure bolt retention while maintaining convenient removability. Observe the manufacturer's instructions for the correct use of the thread locker!

NOTES ON INSTALLATION, MAINTENANCE AND COATING

INSTALLATION



Never try to close a gap between the *retaining collar* and the *extended magwell* using force by overtightening the *bolts* or other means. This will lead to deformations and irreparable damage to the components!

MAINTENANCE

During maintenance it is sufficient to wipe the *extended magwell* clean.

Due to the coating it is neither necessary nor recommended to use aggressive solvents or abrasive tools for cleaning!

COATING

The coating is applied electrochemically.

Where the Aluminium parts are suspended during processing they may show minute, bare spots where contact has taken place. These have no impact on the durability and resilience of the coating.

The coating is also subject to wear – especially in exposed areas (edges, etc.). Process related spots as well as installation or usage related wear are not considered a defect.

In case of any questions please contact us at

office@tectal.at

© 2018 TECTAL GmbH, A-4431 Haidershofen, Austria

www.tectal.at

This manual or parts thereof may not be used, reproduced or published without express written permission of TECTAL GmbH.